



## Nano Switch

View the expanded manual:  
<http://aeotec.com/support>

### **IMPORTANT!**

This product has been fully tested and certified to work with Z-Wave by the Z-Wave Alliance. It is crafted using Z-Wave Plus, the latest device version of Z-Wave. As such, if the product does not work with your gateway, please be sure to check with your gateway manufacturer that they have integrated this device with their gateway for full operation.



## Warning

Do not dispose of electrical appliances as unsorted municipal waste, use separate collection facilities. Contact your local government for information regarding the collection systems available.

## Certifications (regional):



Z-Wave and Z-Wave Plus are registered trademarks of Sigma Designs and its subsidiaries in the United States and other countries  
FCC ID: XBAFT132



**Intertek**  
**400555**




## ① Aeotec by Aeon Labs Nano Switch.

Aeotec Nano Switch is a low-cost Z-Wave Switch specifically used to enable Z-Wave command and control (on/off) of any wall switches. It can report immediate wattage consumption or kWh energy usage over a period of time. In the event of power failure, non-volatile memory retains all programmed information relating to the unit's operating status.

It can connect to 2 external manual switches to control the load ON/OFF independently. Its surface has a pin socket, which can be used for connecting to the touch panel, so you can also use the touch panel to control the Nano Switch.

The Nano Switch is also a security Z-Wave plus device and supports Over The Air (OTA) feature for the products firmware upgrade.

## ② Familiarize yourself with your Nano Switch.

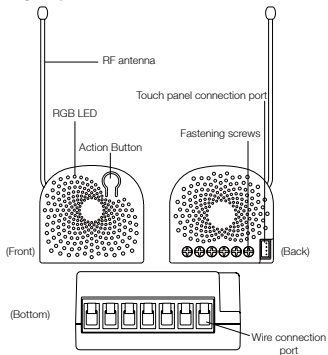

2

to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.


### UL NOTICE (For USA).

1. Install only in a UL listed junction box sized 3×2×2.75 inch (75×50×70 mm) or larger, minimum volume 14 in<sup>3</sup> (230 cm<sup>3</sup>).
2. Use Copper Conductors Only.
3. "CAUTION – Risk of Electric Shock – More than one disconnect switch may be required to de-energize the equipment before servicing".
4. "WARNING - This device shall not be used in combination with a wall switch controlling a receptacle."

31

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged

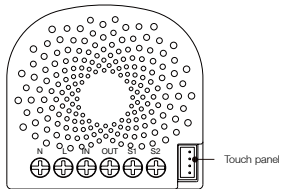


### Notes for the wire connection ports:

- N – Power input for neutral
- L – Power input for live
- IN – Input for load power supply
- OUT – Output for load
- S1 – External switch control for load
- S2 – External switch control for load

## Install the Nano Switch.

Important: A licensed electrician with knowledge and understanding electrician systems and electrical safety should complete the electrical installation.

1. Shut off the main circuit breaker of your home for safety during the installation and ensure the wires are not short circuited during the installation which will cause damage to the Nano Switch.

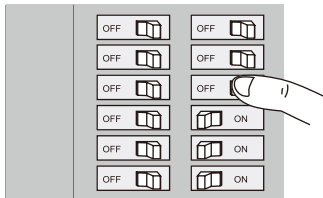

Note: Your home's main circuit breaker must support the overload protection for safety.

WITHIN THIRTY (30) DAYS FROM AEON LABS' DELIVERY, OR THE DATE FIXED FOR DELIVERY IN THE EVENT OF NONDELIVERY. THE INDEMNITY AND WARRANTY IN ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER INDEMNITIES OR WARRANTIES, WHETHER EXPRESS OR IMPLIED, INCLUDING THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

## FCC NOTICE (for USA)

THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

STORE INDOORS WHEN NOT IN USE. SUITABLE FOR DRY LOCATIONS. DO NOT IMMERSE IN WATER. NOT FOR USE WHERE DIRECTLY EXPOSED TO WATER.

DAMAGES FOR LOSS OF PROFITS, REVENUE, OR USE INCURRED BY CUSTOMER, COMPANY OR ANY THIRD PARTY, WHETHER IN AN ACTION IN CONTRACT, OR TORT, OR OTHERWISE EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. AEON LABS' LIABILITY AND CUSTOMER'S EXCLUSIVE REMEDY FOR ANY CAUSE OF ACTION ARISING IN CONNECTION WITH THIS AGREEMENT OR THE SALE OR USE OF THE PRODUCTS, WHETHER BASED ON NEGLIGENCE, STRICT LIABILITY, BREACH OF WARRANTY, BREACH OF AGREEMENT, OR EQUITABLE PRINCIPLES, IS EXPRESSLY LIMITED TO, AT AEON LABS' OPTION, REPLACEMENT OF, OR REPAYMENT OF THE PURCHASE PRICE FOR THAT PORTION OF PRODUCTS WITH RESPECT TO WHICH DAMAGES ARE CLAIMED. ALL CLAIMS OF ANY KIND ARISING IN CONNECTION WITH THIS AGREEMENT OR THE SALE OR USE OF PRODUCTS SHALL BE DEEMED WAIVED UNLESS MADE IN WRITING

## 2. Preparing connection wires


14 AWG power wires for Input/ Output.

18 AWG copper wires for external manual switch.

Use the wire stripper cut the metallic part of the connection wire and make sure the length of the metallic part is about 5mm.




Cut wire if necessary

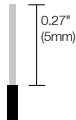

Strip Gauge (measure bare here)

Note: All connection wires need to be flexible cable.

## Wiring diagram of AC120V/230V power input.

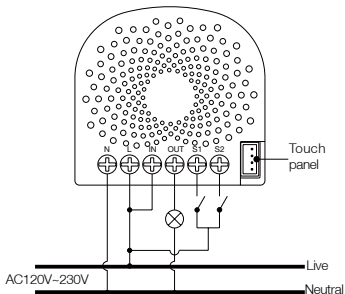

proceedings, suits, assessments, losses, damages, liabilities, settlements, judgments, fines, penalties, interest, costs and expenses (including fees and disbursements of counsel) of every kind (i) based upon personal injury or death or injury to property to the extent any of the foregoing is proximately caused either by a defective product (including strict liability in tort) or by the negligent or willful acts or omissions of Customer or its officers, employees, subcontractors or agents, and/or (ii) arising from or relating to any actual or alleged infringement or misappropriation of any patent, trademark, mask work, copyright, trade secret or any actual or alleged violation of any other intellectual property rights arising from or in connection with the products, except to the extent that such infringement exists as a result of Aeon Labs' manufacturing processes.


IN NO EVENT SHALL AEON LABS BE LIABLE FOR ANY INDIRECT, INCIDENTAL, PUNITIVE, SPECIAL OR CONSEQUENTIAL DAMAGES, OR



modification to the Products or its components.

Aeon Labs does not authorize any person or party to assume or create for it any other obligation or liability in connection with the Products except as set forth herein. Aeon Labs will pass on to Company all manufacturers' Material warranties to the extent that they are transferable, but will not independently warrant any Material. Company will assist Customer with all warranty, repair, return and technical support needs, Company must prepay shipping and transportation charges for returned Products, and insure the shipment or accept the risk of loss or damage during such shipment and transportation. Aeon Labs will ship the repaired or replacement products to Company freight prepaid. Customer and Company shall indemnify, defend, and hold Aeon Labs and Aeon Labs' affiliates, shareholders, directors, officers, employees, contractors, agents and other representatives harmless from all demands, claims, actions, causes of action,


In some cases, you may have some loads just only can be used on the voltage of DC24V and hope that it still can be controlled by the Nano Switch, so please refer to the following diagram to achieve this:

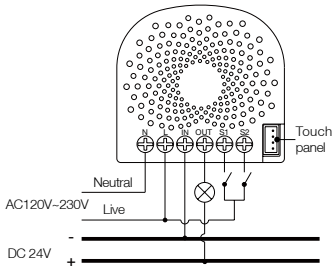

Note: The "IN" terminal should be connected to the "-" of DC 24V input.

## Wiring diagram of DC24V power input.

Since the Nano Switch also supports the DC24V power input, so you can use it to control the loads that powered by DC24V.

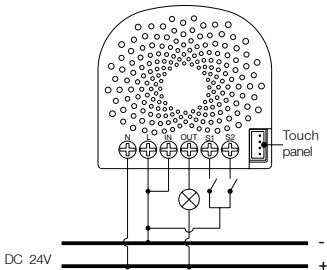

purchased from in writing within thirty (30) days of the manifestation of a problem.

Aeon Labs' sole obligation under the foregoing warranty is, at Aeon Labs' option, to repair, replace or correct any such defect that was present at the time of delivery, or to remove the Products and to refund the purchase price to Company.

The Warranty Period begins on the date the Products is delivered and continues for 12 months. Any repairs under this warranty must be conducted by an authorized Aeon Labs service representative and under Aeon Labs' RMA policy. Any repairs conducted by unauthorized persons shall void this warranty.


Excluded from the warranty are problems due to accidents, acts of God, civil or military authority, civil disturbance, war, strikes, fires, other catastrophes, misuse, misapplication, storage damage, negligence, electrical power problems, or

support. The Company you bought this product from has also guaranteed to assist you with any of your support needs, and you can also contact them for accordingly.

This guarantee made by the company who you purchased the product from includes the transfer of Aeon Labs' full warranty to that Company. They've guaranteed that they'll be able to assist you, the Customer, with all technical support and repair needs on our behalf.

Aeon Labs warrants to the original purchaser of Products, that is the Company who you have purchased from, that for the Warranty Period (as defined below), the Products will be free from material defects in materials and workmanship. The foregoing warranty is subject to the proper installation, operation and maintenance of the Products in accordance with installation instructions and the operating manual supplied. Warranty claims must be made to the Company who you have

If the output loads should be only powered by AC120V or AC230V, you can change the wire connection as below:

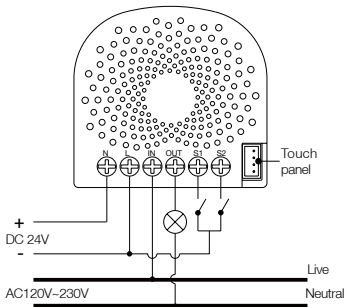

Note: The “IN” terminal should be connected to the “Live” of AC 120V/230V power wire.

All above wiring diagrams show that the Nano Switch uses 2-Way or momentary button switches as the external manual switch for 2-Way connection.

The below diagram will show you that the Nano Switch uses the SPDT (Single-Pole Double-Throw) switches as the external manual switch for 3-Way connection.

**Wiring diagram of 3-Way connection for the external manual switch.**

Relative humidity: 8% to 80%.

Operating distance: Up to 492 feet/150 meters outdoors.

#### **AC power supply:**

| Version | Input/output        | Working band |
|---------|---------------------|--------------|
| AU      | 230V 50Hz, Max: 10A | 921.42MHz    |
| BR      | 220V 60Hz, Max: 10A | 921.42MHz    |
| CN      | 220V 50Hz, Max: 10A | 868.42MHz    |
| EU      | 230V 50Hz, Max: 10A | 868.42MHz    |
| IL      | 230V 50Hz, Max: 10A | 868.42MHz    |
| IN      | 230V 50Hz, Max: 10A | 865.22MHz    |
| UK      | 230V 50Hz, Max: 10A | 868.42MHz    |
| US      | 120V 60Hz, Max: 15A | 908.42MHz    |

#### **⑦ Warranty.**

If you are in need of any technical support during or subsequent to your products' warranty, please get in touch with our support team via <http://aeotec.com/>

to your Z-Wave network, its RGB LED will be solid. If the pairing was unsuccessful, the red LED will be on for 2 seconds and then remain a colourful gradient, repeat the instructions above from step 1.

### Reset your Nano Switch.


If at some stage, your primary controller is missing or inoperable, you may wish to reset all of your Nano Switch's settings to their factory defaults. To do this, press and hold the Action Button for 20 seconds and then release it. Your Nano Switch will now be reset to its original settings, and the green LED will be solid for 2 seconds and then remain the colourful gradient status as a confirmation.

### ⑥ Technical specifications.

Model number: ZW116/ZW139

Max standby power: 0.8W.

Operating temperature: 0°C to 40°C /32 °F to 104 °F .

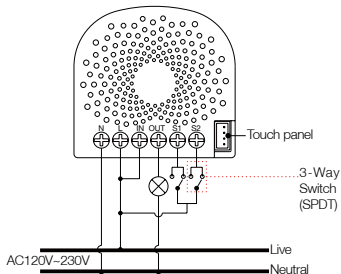


### 3. Install Nano Switch to the gang box.

- Live/Hot wire connection: Connect the Live/Hot wire to the "L" terminal on the Nano Switch.
- Neutral wire connection: Connect the Neutral wire to the "N" terminal on the Nano Switch.
- Load wire connection: Connect the Load wire

to the “OUT” on the Nano Switch.

- d. External/manual Switch connection: Connect 2 18AWG wires to the “S1” and “S2” on the Nano Switch.
- e. External/manual Switch connection: Connect 2 18AWG wires from the 2 terminals on the External/manual Switch to the Live wire.

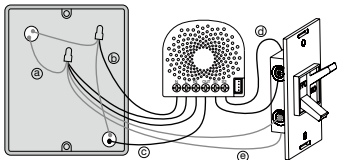

Note: This is the physical connection diagram for AC120V/230V power input.

- 4. Mounting the gang box.
  - a. Position all wires to provide room for the

device in your Z-Wave network, press the Action Button once on Nano Switch when you pair it to your gateway. If inclusion is successful, the green LED will be on for 2 seconds, and then return to a solid indication. If inclusion is unsuccessful, the red LED will be on for 2 seconds and then return to a colourful gradient.

### Including Nano Switch as a secure device:

In order to take full advantage of the Nano Switch, you will want your Nano Switch as a security device that uses encrypted messages to communicate in your Z-wave network. A security enabled controller/gateway (or Z-Wave Plus controller) is required.

1. Set your Z-Wave Plus controller into pairing mode.
2. Press the Action Button 2 times within 1 second on the Nano Switch, the blue LED (secure indication) will blink to indicate the Nano Switch is entering into secure pairing mode.
3. If the Nano Switch has been successfully added

usage or kWh energy usage to a Z-Wave control point when requested. If this function is supported by the control points, the energy consumption will be displayed in the user interface of the control points. (The specific Z-Wave commands supporting energy monitoring are the Meter Command Class. Automatic reports are sent to association group 1, which is setup via the Association Command Class.) Please consult the operation manual for these control points for specific instructions on monitoring the Nano Switch.

Note: The model ZW139 Nano Switch does not have the ability to monitor energy consumption. The model ZW116 Nano Switch supports the energy metering feature and you can see the words “with Energy Metering” on its packaging box.


**Security or Non-security feature of your Nano Switch in Z-Wave network.**

**Including Nano Switch as a non-secure device:**

If you want your Nano Switch as a non-secure


device. Place the Nano Switch inside the gang box towards the back of the box.

- b. Position the antenna towards the back of the box, away from all other wiring.
- c. Reinstall the Nano Switch to the gang box.
- d. Reinstall the cover onto the gang box.

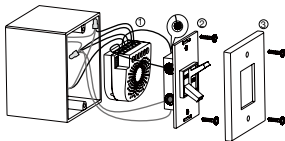

Note:

- a. The gang box should be sized 3x2x2.75 inch/ 75x50x70 mm or larger, minimum volume 14 in<sup>3</sup> / 230cm<sup>3</sup>.
  - b. Use flexible copper conductors only.
5. Restore Power.  
Restore power at the circuit breaker or fuse.

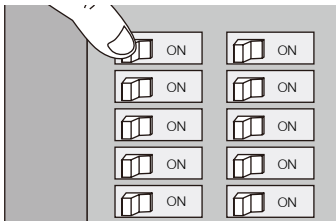

### ③ Quick start.


#### Adding your Nano Switch to a Z-Wave network.

After your Nano Switch is installed and powered on, you are now able to manually control the Nano Switch to turn it On/Off directly via pressing your Nano Switch's Action Button, it is time to add your Nano Switch to the Z-Wave network. To set your

When the Nano Switch enters automatic identification mode, it has 20 seconds before timeout for detecting the manual switch.

#### Touch panel control.

As you can see that the Nano Switch's surface has a pin port, this port is used to connect the Touch panel. When you have already connected it to the Nano Switch, you will be possible to control the Nano Switch through the Touch panel directly.

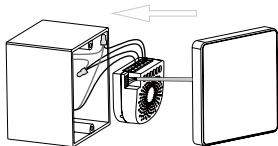

#### Monitoring Energy Consumption.

The Aeotec Nano Switch can report wattage energy



The parameter 121 [1 byte dec] is the parameter that will set one of the 3 different modes for external switch S2. If you set this configuration to:

- (0) Unknown mode
- (1) 2-state switch mode
- (2) 3-way switch mode
- (3) Momentary push button mode
- (4) Enter automatic identification mode. (The green LED will fast blink)

Note: You can also use the Action Button of Nano Switch to activate the automatic identification mode, as below:

1. Quick press the Action Button 4 times, which will activate the automatic identification mode for external switch S1, you will see the blue LED fast blinks.
2. Quick press the Action Button 6 times, which will activate the automatic identification mode for external switch S2, the green LED will fast blink.

Z-Wave gateway/controller into pairing mode, please refer to the respective section within your controller instruction manual.

1. Set your Z-Wave controller into pairing mode.
2. Press the Action Button on the Nano Switch or toggle the external manual switch once, the green LED (non-secure indication) will blink to indicate the Nano Switch is entering into pairing mode.
3. If the Nano Switch has been successfully added to your Z-Wave network, its RGB LED will be solid. If the pairing was unsuccessful, the red LED will be on for 2 seconds and then remain a colourful gradient, repeat the instructions above from step 1.

With your Nano Switch now working as a part of your smart home, you'll be able to configure it from your home control software/phone application. Please refer to your software's user guide for further instructions on configuring Nano Switch to your needs.

#### ④ Removing Nano Switch from a Z-Wave network.

Your Nano Switch can be removed from your Z-Wave network at any time. You'll need to use your Z-Wave network's main controller. To set your Z-Wave controller/gateway into removal mode, please refer to the respective section within your controller instruction manual.

1. Set your Z-Wave controller into removal mode.
2. Press the Action Button on the Nano Switch or toggle the external manual switch 3 times in fast succession.
3. If the Nano Switch has been successfully removed from your Z-Wave network, its RGB LED will remain colourful gradient. If the removal was unsuccessful, the RGB LED will still be solid (following the state of the output load), repeat the instructions above from step 1.

#### ⑤ Advanced functions.

#### Changing mode on the External Switch/Button Control.

The Nano Switch can be controlled via 2-state (flip/flop) external/manual switch, momentary push button or the 3-way switch. To automatically detect and set the mode to the appropriate type of manual switch wired into Nano Switch, toggle the button on the manual switch once and wait 2 seconds for the Nano Switch to detect the type of manual switch.

You can also set the external switch mode through Configuration Command Class.

Parameter 120 [1 byte dec] is the parameter that will set one of the 3 different modes for external switch S1. If you set this configuration to:

- (0) Unknown mode
- (1) 2-state switch mode
- (2) 3-way switch mode
- (3) Momentary push button mode
- (4) Enter automatic identification mode. (The blue LED will fast blink)

# Association information

## 5.3 Association Command Class

Nano Switch supports 4 association groups and Max 5 nodes for every group.

| Association Group | Nodes | Send Mode   | Send commands  |
|-------------------|-------|-------------|--|
| Group 1           | [1,5] | Single Cast | When the state of Nano Switch (turn on/off the load ) is changed:<br>1. Set Configuration parameter 80 to 0: Reserved (Default).<br>2. Set Configuration parameter 80 to 1: Send Hail CC.<br>3. Set Configuration parameter 80 to 2: Send the Basic Report.<br>4. Set Configuration parameter 80 to 3: Send the Basic Report when using the manual switch to change the load state.                          |
| Group 2           | [1,5] | Single Cast | Forward the Basic Set, Switch All, Scene Activation Set to associated nodes in Group 2 when the Nano Switch receives the Basic Set, Switch All, Scene Activation Set commands from main controller.<br>(E.g. Send/forward Basic Set to control the other nodes in association Group 2)   |
| Group 3           | [1,5] | Single Cast | Send Basic Set (enabled by Configuration parameter 0x51) to the associated nodes in Group 3 when the external switch S1 is operated.<br><b>Note:</b> The Switch Mode of external switch S1 should be identified successfully, which means that the value of Configuration parameter 0x78 should be non-zero, then the Basic Set can be sent to the associated nodes in Group 3 via triggering the S1 switch. |
| Group 4           | [1,5] | Single Cast | Send Basic Set (enabled by Configuration parameter 0x52) to the associated nodes in Group 4 when the external switch S2 is operated.<br><b>Note:</b> The Switch Mode of external switch S2 should be identified successfully, which means that the value of Configuration parameter 0x79 should be non-zero, then the Basic Set can be sent to the associated nodes in Group 3 via triggering the S2 switch. |

## Configuration parameters information

| Parameter Number Hex / Decimal | Description   | Default Value | Size |
|--------------------------------|---|---------------|------|
| 0x03 (3)                       | Over current protection. Output load will be closed after 30 seconds if the current exceeds 10.5A.<br>0 = Disabled<br>1 = Enabled   | 1             | 1    |
| 0x04 (4)                       | Over heat protection. Output load will be closed after 30 seconds if the temperature inside the product exceeds 100°C.<br>0 = Disabled<br>1 = Enabled   | 0             | 1    |
| 0x14 (20)                      | Configure the output load status after re-power on<br>0 = The last status before the power outage.<br>1 = Always on<br>2 = Always off   | 0             | 1    |
| 0x50 (80)                      | To set which notification would be sent to the associated nodes in association group 1 when the state of output load is changed.<br>0 = Nothing<br>1 = Hail CC<br>2 = Basic Report CC<br>3 = Hail CC when using the external switch to switch the loads.<br><i>Note:</i> When just only one channel load state is changed, the report message Hail CC or Basic Report CC would be Multi Channel encapsulated. | 3             | 1    |

|           |   |  |   |
|-----------|---|--|---|
| 0x51 (81) | To set which notification would be sent to the associated nodes in association group 3 when using the external switch 1 to switch the loads.<br>0 = Send Nothing<br>1 = Basic Set CC.   | 1  | 1 |
| 0x52 (82) | To set which notification would be sent to the associated nodes in association group 4 when using the external switch 2 to switch the loads.<br>0 = Send Nothing<br>1 = Basic Set CC.   | 1  | 1 |
| 0x53 (83) | Configure the state of LED when it is in 3 modes below:<br>0 = Energy mode. The LED will follow the status (on/off).<br>1 = Momentary indicate mode. When the state of Switch's load changed, the LED will follow the status (on/off) of its load, but the LED will turn off after 5 seconds if there is no any switch action.<br>2 = Night light mode. The LED will remain ON state. | 0  | 1 |
| 0x54 (84) | Set the ON/OFF time of the LED when it is in Night light mode.<br>Value1 = ON (hour)<br>Value2 = ON (minute)<br>Value3 = OFF (hour)<br>Value4 = OFF (minute)  | Value1=0x12<br>Value2=0x00<br>Value3=0x08<br>Value4=0x00 | 4 |

|            |  |  |   |
|------------|--|--|---|
| 0x56 (86)  | Set the ON time of output load.<br>Value1 = 0, disable or =1, enable.<br>Value2 = ON (day, bit0 - bit6 represent Mon to Sun)<br>Value3 = ON (hour)<br>Value4 = ON (minute)     | Value1=0x00<br>Value2=0x7F<br>Value3=0x12<br>Value4=0x00 | 4 |
| 0x57 (87)  | Set the OFF time of output load.<br>Value1 = 0, disable or =1, enable.<br>Value2 = OFF (day, bit0 - bit6 represent Mon to Sun)<br>Value3 = OFF (hour)<br>Value4 = OFF (minute) | Value1=0x00<br>Value2=0x7F<br>Value3=0x17<br>Value4=0x00 | 4 |
| 0x5A (90)  | Enable/disable the parameter 91 and 92 below<br>0 = Disable<br>1 = Enable  | 0  | 1 |
| 0x5B (91)  | The value here represents minimum change in wattage (in terms of wattage) to induce a Meter Report (available range 0-60000).  | 25 (W)   | 2 |
| 0x5C (92)  | The value here represents minimum change in wattage percent (in terms of percentage) to induce a Meter Report (available range 0-100).   | 5 (%)  | 1 |
| 0x64 (100) | Set 101-103 to default.  | N/A  | 1 |
| 0x65 (101) | To set which report would be sent in Report group 1 (See flags in table below).  | 0x00 00 00 00  | 4 |
| 0x66 (102) | To set which report would be sent in Report group 2 (See flags in table below).  | 0x00 00 00 00  | 4 |
| 0x67 (103) | To set which report would be sent in Report group 3 (See flags in table below).  | 0x00 00 00 00  | 4 |
| 0x6E (110) | Set 111-113 to default.  | N/A  | 1 |
| 0x6F (111) | The time interval of sending Report group 1.   | 0x00 00 00 0A  | 4 |
| 0x70 (112) | The time interval of sending Report group 2.   | 0x00 00 02 58  | 4 |
| 0x71 (113) | The time interval of sending Report group 3.   | 0x00 00 02 58  | 4 |

|            |   |     |   |
|------------|---|-----|---|
| 0x78 (120) | Set the external switch mode of S1<br>0 = automatic identification mode.<br>1 = 2 state switch mode<br>2 = 3 way switch mode<br>3 = push button mode<br><b>Note:</b> When the switch mode of S1 is determined or identified or configured, this mode value will not be reset after exclusion. | 0   | 1 |
| 0x79 (121) | Set the external switch mode of S2<br>0 = automatic identification mode.<br>1 = 2 state switch mode<br>2 = 3 way switch mode<br>3 = push button mode<br><b>Note:</b> When the switch mode of S2 is determined or identified or configured, this mode value will not be reset after exclusion. | 0   | 1 |
| 0x7A (122) | Set the control destination for external switch<br>1 = control the output loads of itself.<br>2 = control the other nodes.<br>3 = control the output loads of itself and other nodes.   | 3   | 1 |
| 0xFC (252) | Enable/disable Configuration Locked (0 =disable, 1 = enable).   | 0   | 1 |
| 0xFF (255) | 1. Value = 0x55555555. Default = 1. Size = 4<br>Reset to factory default settings and removed from the z-wave network<br>2. Value = 0. Default = 1. Size = 1<br>Reset all configuration parameters to factory default settings  | N/A | 4 |
|            |   | N/A | 1 |

Configuration Values for parameter 101-103:

|                            | 7        | 6        | 5        | 4        | 3                                | 2                                | 1                             | 0                            |
|----------------------------|----------|----------|----------|----------|----------------------------------|----------------------------------|-------------------------------|------------------------------|
| configuration Value 1(MSB) | Reserved |          |          |          |                                  |                                  |                               |                              |
| configuration Value 2      | Reserved |          |          |          |                                  |                                  |                               |                              |
| configuration Value 3      | Reserved |          |          |          |                                  |                                  |                               |                              |
| configuration Value 4(LSB) | Reserved | Reserved | Reserved | Reserved | Auto send Meter REPORT (Current) | Auto send Meter REPORT (Voltage) | Auto send Meter REPORT (Watt) | Auto send Meter REPORT (kWh) |

**Aeotec**  
BY AEON LABS